 




# SMART MARKER

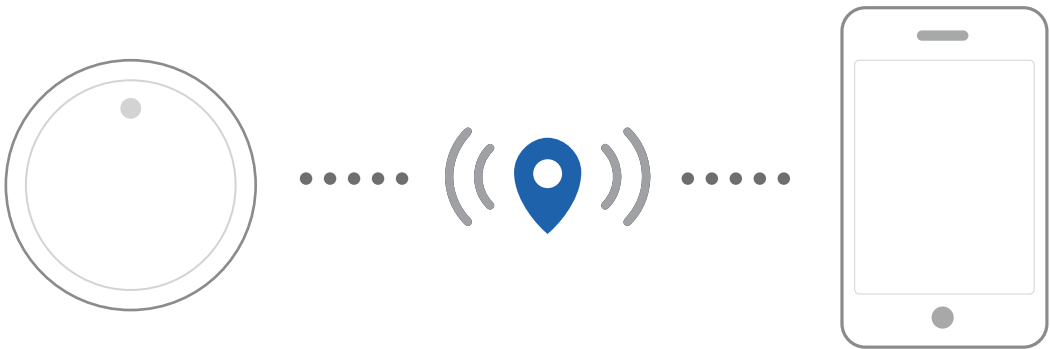

VOICE  
GOLF GPS



BALL  
MARKER



SHOT  
TRACKING

 
# Golfwith:GOLF GPS VOICE App Download

## Step1. Download

### Golfwith:GOLF GPS VOICE App

There are 3 ways to download the Golfwith:GOLF GPS VOICE App.

1. Go to Apple App Store or Google Play.  
search **Golfwith:GOLF GPS VOICE**
2. Go to <http://golfwith.golfzon.com/smartmarker>
3. Scan the QR code on the back side of the SMART MARKER.

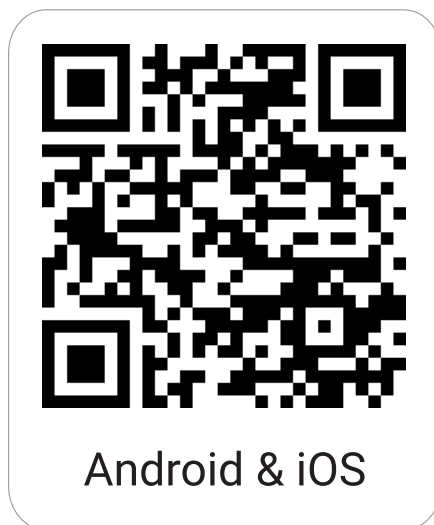

## Step2. Install the App

Install and start the Golfwith:GOLF GPS VOICE App in your phone.

---

 
### *Compatible Devices*

iPhone 4S & later (iOS 8.0 or higher)  
Android 4.3 or higher

# Golfwith:GOLF GPS VOICE App Tutorial 01

## Register SMART MARKER

- Please turn on bluetooth.
- When you see the above screen, press the button on the SMART MARKER.
- Screen will change once the SMART MARKER is registered.

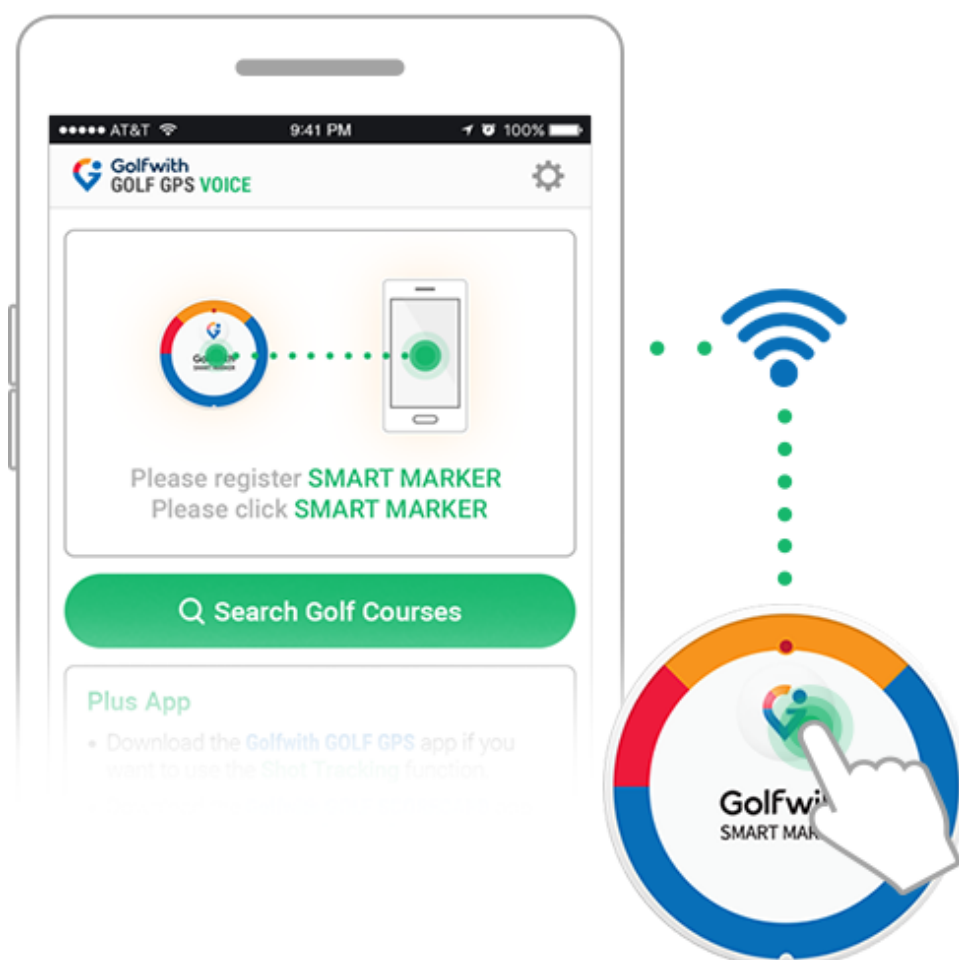


# Golfwith:GOLF GPS VOICE App

## Tutorial 02

### How to Play

 - Just go to the first tee and you will be ready to play.
- Press the button 1 time, you can get the remaining distance of the current hole.

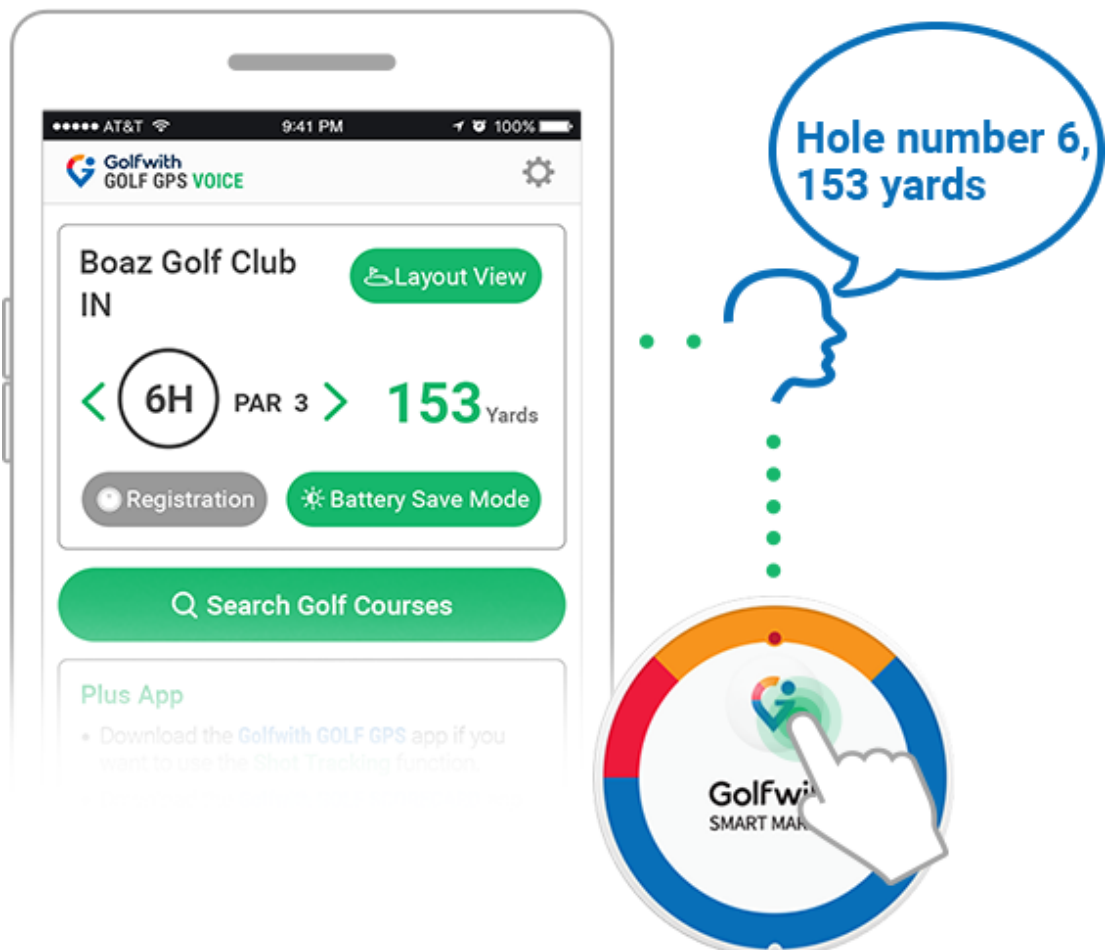


# Golfwith:GOLF GPS VOICE App

## Tutorial 03

### Battery Save Mode

 - By turning on the Battery Save Mode, the screen brightness will be dimmed.
- Press the volume button to unlock the Battery Save Mode.

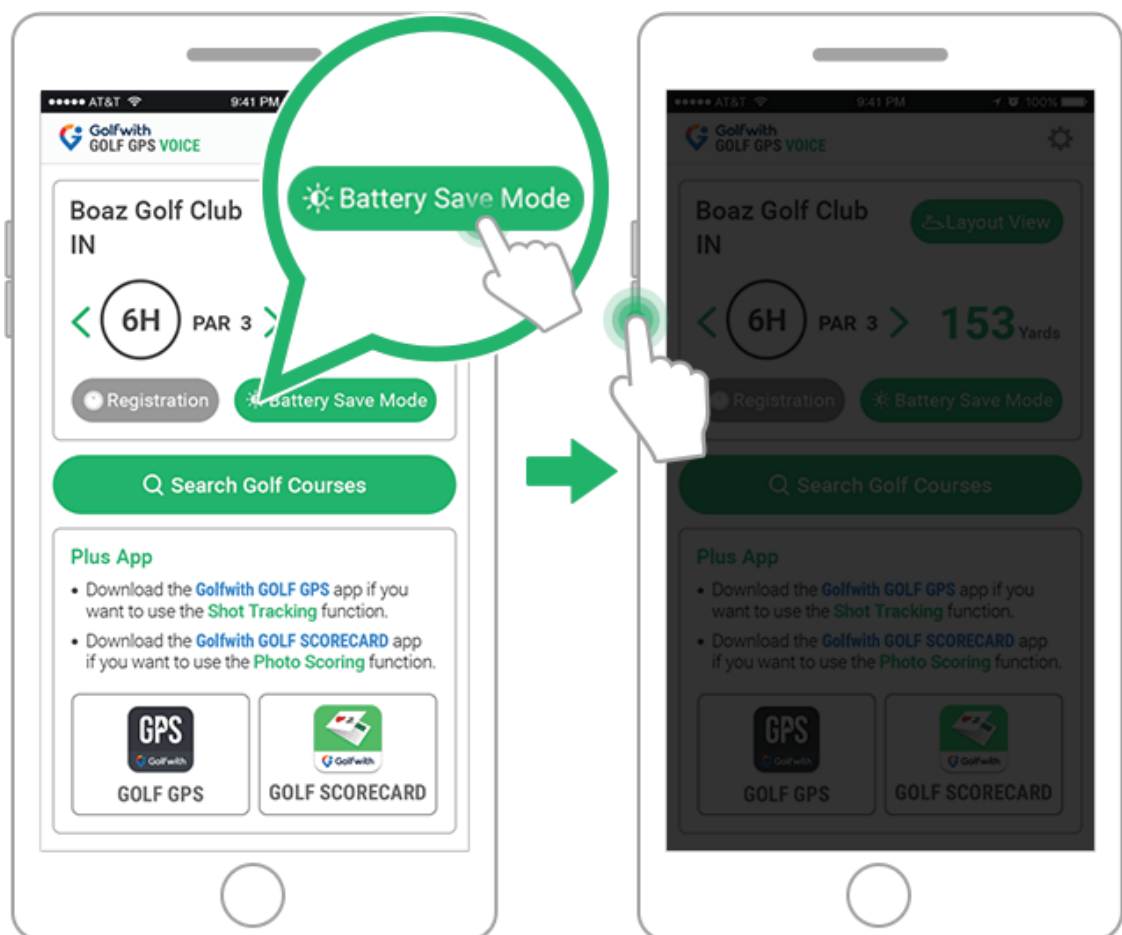

# What is Golfwith:GOLF GPS?

- In addition to voice guidance, you can also offer more features to provide statistics on your golf scores, shots.
- Use SMART MARKER to easily save your shot history.



## Download Guide

- Direct download from Golfwith website:  
<http://golfwith.golfzon.com/golfgps>
- Search and Download "Golfwith GOLF GPS" by searching "Golfwith" on Google Play or Apple App Store.



# Service Features

## Shot Tracking & History Management

 
- Position and club played in real-time during your round to perform distance and score analysis.
- Compare your shot records on the current round with the records from the previous round.



## High-resolution Satellite Imagery

- More than 60,000 golf courses worldwide are offered by satellite.

# Device Figure Guide

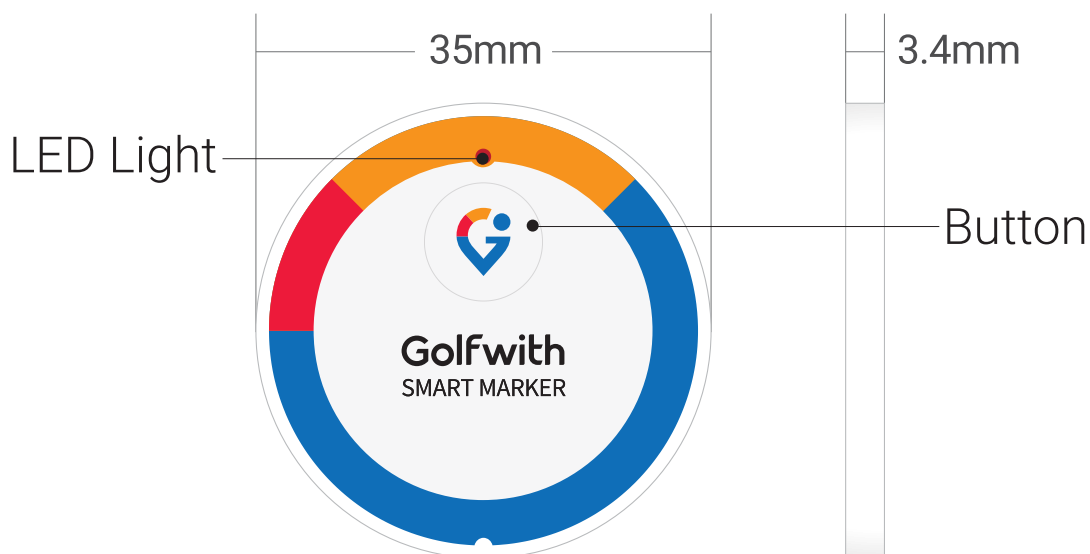

## Tips

- Use the Battery Save Mode to save a battery.



- Place the Smartphone in the cup holder in the cart.



- Please fully charge the battery before using.  
Close all apps not used during your round of golf.





# Notice & Warranty

One year warranty from the date of original retail purchase.  
(No warranty against damages or loss caused by accident, abuse, or natural disasters.)

## Everyday Use Warnings

SMART MARKER is only water-resistant in very small amounts of rain. Therefore please pay caution in the following circumstances:

- Don't expose Smart Marker to large amounts of water.
- After replacing battery, please attach the sticker firmly.
- Do not take off Smart Marker's Sticker for covering.

## Usage & Liabilities

- Do not use the product for purposes other than its intended functions.
- Do not separate and disassemble the product.
- Do not subject the product to severe impact, such as one caused by a drop.
- Do not use unauthorized components.
- We hold no liability for information that may leak from Bluetooth communications.
- We hold no liability for damage to clubs such as scratches, spots, etc.
- Do not expose the product to severe temperature or humidity.
- Do not use on a hard surface such as concrete or asphalt.
- Optimal Temperature : 5~35℃
- Frequency Band : 2400~2480MHz